



## Thru-the-Fence Kennel Feeder Installations

-fits most standard chain-link fence of (2.5 inch x 2.5 inch) diagonal spacing.

Your Thru-the Fence Kennel Feeder consists of a CHUTE, a BOWL and (2) sets of nylon wing-nuts & bolts.

**Step 1.** Insert CHUTE through fence at desired location. Locate CHUTE approximately 4-inches above desired BOWL height.



**Step 2.** With CHUTE in place locate BOWL as shown BELOW and insert (1) bolt through CHUTE then BOWL and loosely connect wing-nut. DO NOT tighten wing-nut until Step 4.



**Step 3.** Insert remaining bolt through CHUTE then BOWL and loosely connect wing-nut.

**Step 4.** With CHUTE and BOWL resting against each other, tighten wing-nuts. **HAND TIGHTEN ONLY, DO NOT OVER TIGHTEN.**